


REC-10K – Pneumatic Driver

Instructions to change over adaptors

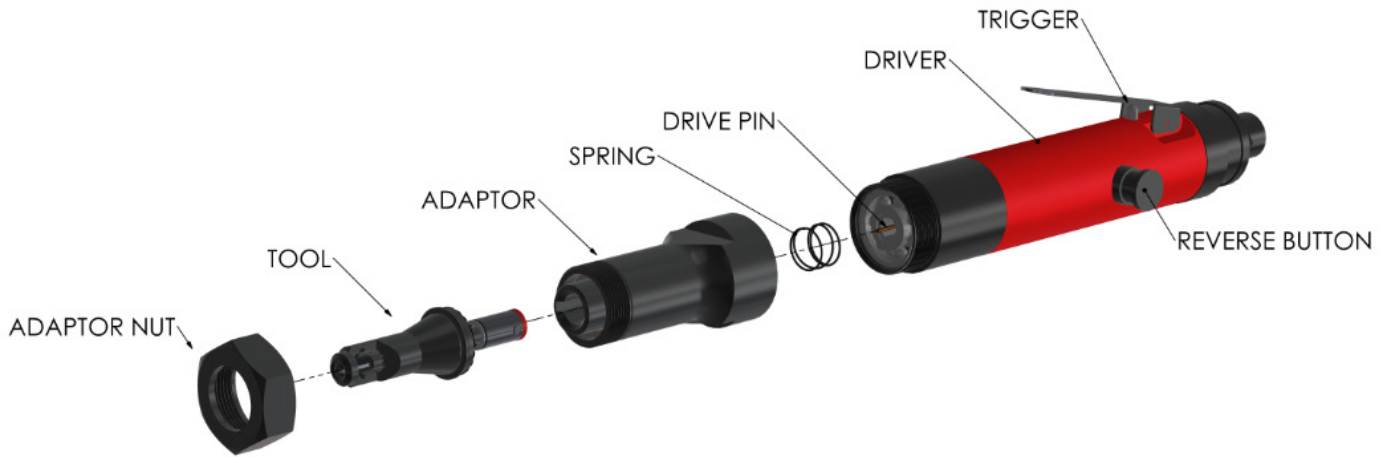

Part No. REC-10K

Kit contents	Qty
Standard ¼" Hex Drive	1
Small Adaptor to suit FEA	1
Large Adaptor to suit FEA	1
Air regulator	1
Lubricator	1
Gauge	1
Hose	1
Screwdriver	1
Manual spanners to for adaptors	2
Manual with parts list	1



Hex Installation Mandrel –

Used with Hex Adaptor Only

Part No. 5---7 or TL5---7



Tangless Hex Tool –

Used with Hex Adaptor Only

Part No. TL5---7 & Part No. TL5---3



Front End Assembly –

Used with Small and Large Adaptor

Part No. TL5---0 or 5---0

Adaptors included in the Kit



Hex Adaptor




Large Adaptor



Small Adaptor

How to change or remove the FEA

1. Using the spanners provided to remove the FEA Front End Assembly.
 - a. Arrows showing direction of the spanners

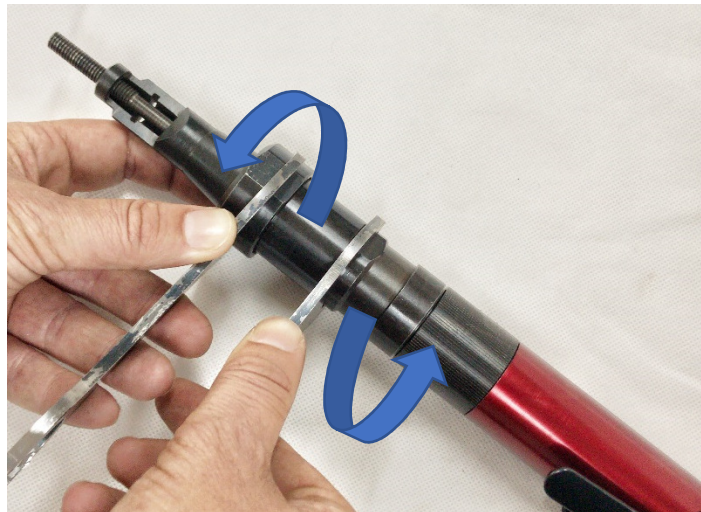

How to change or remove Adaptor

1. Use the spanners provided by turning the adaptor anti clockwise to remove the adaptor.

Note: When using all the adaptors please ensure the Drive Pin and spring are in their right spots – refer to diagram below.

